

BATTERIES

TERMINAL TYPES

Terminal shapes vary from one battery to another. By identifying the correct replacement battery from the listing in this book, you are assured of the proper terminal configuration. For custom applications, refer to the following chart to identify terminal shape and corresponding batteries.

Type	Illustration	Terminal			Battery Type				
		Front	Side	Top					
1					YB7C-A YB4L-A1	Y7X1-B5-1			
2					YB9L-A2 12N6.5-4A YB16AL-A2				
3					YB8-N24AL-B 12N24-1	YB2-N24-A 12N24-3A			
4					EY23L EY3L-1 Y7X1-L-B5 Y7X2L-B5	YB2-H14L-A3 YB3L-B5 Y7X1-B5 Y7X2AL-B5	YB12F-A YB3DL-B5-PM Y7X20-B5 Y7X20AL-B5	YB16B-A Y7X144L-B Y7X20H-B5	YB30CL-1 Y7X144H-B5 Y7X20AL-B5-PM
5					EY216H EY216HL YB4L-B Y7X14L-B5	Y7X7L-B5 YB13-14-B5 Y712A-B5 Y7X20H-B5	Y7X3-B5 YB16C-B Y7X12-B5 Y7X4L-B5	Y7255 Y7275 YB16CL-B Y7X14-B5	Y7X2L-B5 YB4L-A Y7X14H-B5 Y7X7A-B5
6					YB3L-A YB7L-B YB12A-A YB16-B 12N6-3B 12N7-4A 12N8-4B-1 6N6-3B 85A-6	YB3L-B YB8A-A YB12AL-A YB16-B-CX 12N6-4B 12N7-4B 12N10-3A 12N10-3A-1 6N11A-1B 83B-6A	YB5L-B YB9-B YB12AL-A2* YB16L-B 12N6.5-3B 12N70-3B 12N11-3A-1 6N11A-1B	YB7-A YB9L-B YB12A-B YB16AL-A-CX 12N6.5A-3B 12N8-3A-1 12N12A-4A-1 6N11-2B	YB7B-B YB10L-B YB14A-A1 5YB16L-1 12N7-3B 12N9-3B 6N12A-2B 83B-B
7					YB16A-AH YB1-H16A-A	YB16B-AH** YB2-H16L-A	YB18-A YB2-H16L-A-CX	YB16L-A 5YB2-H16L-AT	
8					YB10A-A2 YB14-A2 YB14-B2 12N14-3A	YB10L-A2 YB14A-A2 YB14-B2	YB10L-B2 YB14L-A2 12N11-3A-2	YB12B-B2 5YB14L-A2 12N11-3A-1	
9					YB10-C2H 12N8-3A				
10					51814	51913	53000	Y7190L-B5	
11					Y7B3-B5 Y7B5-B5	Y72405	Y72125 Y728-B5	Y72145	Y7143-B5
					Note: Terminal is Brass Plated Steel				
12					Y7RMA-B5				
13					Y74B-B5				
14					EY220H EY220HL	EY220HL			
					Note: Encapsulated Brass Nut				

** Includes terminal adapter for converting to side mount.
 * Includes terminal adapter for converting to top mount.