

NYLON STARTER ROPE

TCI Part #		No.	Ext. Diameter		Length		OEM	Retail
			mm	inch				
568-0200	05-200-01	#4	3.2	1/8"	250'	Heavy Duty Full Weave Black Nylon		\$26.95-H
568-0202	05-202	#4 1/2	3.6	9/64"	250'	Nylon Rope		\$29.95-H
568-0204	05-204-01	#5	4	5/32"	250'	Heavy Duty Full Weave Black Nylon		\$48.95-H
568-0206	05-206	#5 1/2	4.4	11/64"	250'	Nylon Rope	Bombardier, Moto-Ski, Sno-Jet	\$36.95-H
568-0208	05-208-03	#6	4.8	3/16"	250'	Heavy Duty Full Weave Black Nylon	Arctic Cat, B.S.E., Bombardier 412.5001.00, Honda, Polaris, Yamaha, Kawasaki	\$55.95-H
568-0218	05-208-02	#6	4.8	3/16"	10'	8-strand Nylon braid rope	same as above	\$ 3.95-H
568-0219	05-209-01	#6 1/4	5	25/128"	7.2'	Heavy Duty Full Weave Black Nylon		\$ 4.95-H
568-0210	05-210	#6 1/2	5.2	13/64"	250'	Nylon Rope	Arctic Cat 3003-327, Polaris 2870621, Yamaha 857-15751-00-00, Kohler, Rupp	\$70.95-H
568-0212	05-212	#7	5.6	7/32"	250'	Nylon Rope	Arctic Cat 3003-327, Polaris 2870621, Yamaha 857-15751-00-00, Kohler, Rupp	\$75.95-H

REWIND STARTER STEEL CABLE

Model	Year	TCI#	Size	OEM #	Retail	KimpeX
Common Mfg's						
Hirth (All)		69-94	568-0300	106 x 1/8"	165 A 16	\$4.95-L
J.L.O (All)		69-94	568-0302	74 x 1/8"	252.51.809.10	\$4.95-L
Sachs (All)		69-94	568-0301	97 x 1/8"	1470.005.001	\$4.95-L



REWIND ASSEMBLY STARTER KIT

Rewind Assembly Starter Kit Arctic Cat 568-1302 \$112.95-J

Bolt-on ready - Handle included

- Replaces Arctic Cat 3002-933 / 3003-212 / 3003-494 / 3004-287 / 3005-127 / 3006-048 / 3006-915



BEARCAT 340	95-97/99-00
BEARCAT 440	95-00
BEARCAT 550	95-96
BEARCAT WIDETRACK	96-98
CHEETAH (ALL)	86-94
COUGAR (ALL)	85-98
CROSSFIRE 500	06-09
CROSSFIRE 600	06-07/09-11
CROSSFIRE 700 EFI	2006
EL TIGRE (ALL)	86-91
EXT 550 / 580 / EFI	92-93
EXT 580 / 600 (ALL)	94-98
F5 EFI / LXR	08-14
F6 EFI / LXR / SNO PRO / SP	07-11
FIRECAT 500 / 600	05-06
FIRECAT 700 / EFI / SNO PRO	05-06
JAG (ALL)	85-99
KING CAT 900	05-06
LYNX	91-93
M5 / EFI	2005
M6	05-11
M7 / EFI	05-06
PANTERA (ALL)	85-99
PANTERA 550 / 600	2005
PANTERA 800	1999
PANTHER (ALL)	86-00
PANTHER 370	01/05/07-08
PANTHER 440	99-10
PANTHER 550	98-99

POWDER EXTREME / SPECIAL	97-99
PROWLER	90-95
PUMA (ALL)	94-97
SABRECAT EFI 500 / 600 / 700	05-06
SNO PRO 440	05-06
SNO PRO 500	11-14
SNO PRO 550	2010
SNO PRO 600	07-13
SUER JAG	87-92
T500	08-09
THUNDERCAT	93-99
TRIPLE TOURING 600	1999
WILDCAT (ALL)	92-96
Z 370	99-07
Z 440	95-02
Z 440 LX	05-06
ZL 440	95-99
ZL 500	98-99
ZL 600	1999
ZR 400	1995
ZR 440	93-98
ZR 500	98-99
ZR 580	93-97
ZR 600	9899
ZR 700	94-95
ZR 900 EFI / SNO PRO	05-06
ZRT 600	95-99
ZRT 800	98-99

REWIND ASSEMBLY STARTER KIT



Rewind Assembly Starter Kit Bombardier

568-1301

\$99.95-J

Bolt-on ready - Handle included

- Replaces Ski Doo 420.8874.45 / 420.8897.63
420.8897.65 / 420.8897.66 / 420.8926.12
420.8926.15 / 420.8926.18



EXPEDITION 600 H.O. SDI	05-06	MX Z 800 REV	2002
EXPEDITION TUV 600 HO SDI	2007	MX Z TNT 500 SS	2008
EXPEDITION TUV 600 HO SDI, ETEC	10-14	MX Z TNT 600 HO ETEC	09-13
EXPEDITION 1200 4-TEC REV	2012	MX Z TNT 800 ETEC	2013
FREERIDE 800R	12-13	MX Z X 440	02-03
FORMULA DELUXE 500/600/700	2001	MX Z X 440 LC	00-01
GRAND TOURING 500/600/700	01-03	MX Z X 440 RACING	04-05
GRAND TOURING 800	2002	MX Z X 600 HO ETEC	09-13
GRAND TOURING LE 600 HO ETEC	10-13	MX Z X 600 HO SDI	07-08
GRAND TOURING SE 800 SDI	2003	MX Z X 600 RS	09-10
GRAND TOURING SPORT 600	11-12	MX Z X 800 HO PTEK	2007
GSX 500 SS / SS SPORT	05-08	MX Z X 800 R ETEC	10-13
GSX 600 HO	04-07	MX Z X 800 R PTEK	09-10
GSX LE 600 HO ETEC	09-13	MX Z XRS 600 HO ETEC	10-13
GSX LTD 600 HO SDI (ALL OPTIONS)	07-08	MX Z XRS 600 HO SDI	2007
GSX LTD 800 HO PTEK	2007	MX Z XRS 800 HO PTEK	2007
GSX LTD 800 R	2008	MX Z XRS 800 R PTEK	2010
GTX 500 SS	05-06	MX Z XRS 800 R ETEC	11-13
GTX 500 SS SPORT	2007	RENEGADE ADRENALINE 600 HO ETEC	10-13
GTX 600 HO / HO SDI / HO SDI SPORT	05-07	RENEGADE ADRENALINE 800 R PTEK	2010
GTX 800 HO	05-06	RENEGADE BACKCOUNTRY & X 800 R PTEK	2010
GTX LE 600 H.O. E-TEC	2009	RENEGADE BACKCOUNTRY 600 HO ETEC	10-13
GTX LTD 600 HO SDI	2007	RENEGADE X 600 HO ETEC	10-13
GTX LTD 800 HO PTEK	2007	RENEGADE X 800 R PTEK	10-13
LEGEND 500/600/700	02-03	SKANDIC 500	2002
LEGEND 600 HO SDI	2004	SKANDIC 500 F SWT	2003
LEGEND 800 (ALL)	02-04	SKANDIC 500 F WT	2003
MX X 600 SPORT / TNT SPORT	12-13	SKANDIC 600	02-03
MX Z 007 SPECIAL EDITION	2003	SKANDIC 600 SUV	03/05-07
MX Z 440 RACING	2006	SKANDIC 600 WT	05-06
MX Z 440X RACING	2007	SKANDIC 600 WT / SWT HO	11-13
MX Z 500 SS ADRENALINE	05-07	SUMMIT 50TH ANNIVERSARY	2009
MX Z 500 SS TRAIL	05-08	SUMMIT 600	01-02
MX Z 500/600/700	01-03	SUMMIT 600 HO	03-05
MX Z 50TH ANNIVERSARY	2009	SUMMIT 600 HO ETEC EVEREST, SP / SPORT	09-12
MX Z 600 HO	2003	SUMMIT 600 HO SDI, ADRENALINE	06-07
MX Z 600 HO ADRENALINE	04-07	SUMMIT 700	01-03
MX Z 600 HO ETEC ADRENALINE	09-10	SUMMIT 800	01-02
MX Z 600 HO ETEC RENEGADE & RENEGADE X	2009	SUMMIT 800 HM	2000
MX Z 600 HO RENEGADE & RENEGADE X	04-05	SUMMIT 800 HO	03-05
MX Z 600 HO SDI (ALL OPTIONS)	04-08	SUMMIT 800 HO, ADRENALINE & X	2006
MX Z 600 HO TRAIL	04-05	SUMMIT 800 R EVEREST	2008
MX Z 600 RS	2008	SUMMIT 800 R PTEK	09-12
MX Z 800	00-03	SUMMIT HILLCLIMB	09-10
MX Z 800 HO ADRENALINE & X	04-06	SUMMIT SPORT 600	11-13
MX Z 800 HO PTEK (ALL OPTIONS)	2007	SUMMIT SPORT 800R	12-13
MX Z 800 HO RENEGADE & RENEGADE X	04-06	SUMMIT X 600 HO ETEC	09-11
MX Z 800 R ADRENALINE	2008	SUMMIT X 800 HO	2003
MX Z 800 R PTEK ADRENALINE	09-10	SUMMIT X 800 R	08-13
MX Z 800 R PTEK ADRENALINE & RENEGADE X	00-09	TUNDRA EXTREME	11-13

REWIND ASSEMBLY STARTER KIT

Rewind Assembly Starter Kit Bombardier

568-1303

\$99.95-J

Bolt-on ready - Handle included

- Replaces Ski Doo 420-8882-19 / 420-8882-17



GRAND TOURING 380F	02-03	SKANDIC LT 440	01-07
GRAND TOURING 500F	2002	SKANDIC SPORT 550F	2004
GRAND TOURING 550F	2003	SKANDIC SUV 550F	04-10
LEGEND 380F	02-04	SKANDIC SWT 500F	99-03
LEGEND 500F	2002	SKANDIC SWT 550F	03-06
LEGEND 550F	03-04	SKANDIC WT 500F	99-03
MX-Z 380F	01-04	SKANDIC WT 550F	04-06/10-11
MX-Z 500F	2002	SKANDIC WT LC	99-01
MX-Z 550F	03-04	SUMMIT 550F	03-04

ROPE SHEAVES

Arctic Enterprises

All Models	81-06	568-1270	3003-179
Most Models	2007	568-1270	3003-179

Bombardier (Moto-Ski & Ski Doo)

All Models w/single cylinders	69-77	568-3630	420-8521-35
All Models w/twin cylinders	69-80	568-3640	420-8521-25
All Models w/twin cylinders	80-00	568-3670	420-8521-83
Elan 250	71-80	568-3630	420-8521-35
Grand Touring 500/600/700	01-03	568-2400	420-8522-85/8
Grand Touring/Legend 800	2002	568-2400	420-8522-85/8
Grand Touring/Legend SE 800 SDI	2003	568-2400	420-8522-85/8
Legend 500/600/700	2003	568-2400	420-8522-85/8
Legend 700	2004	568-2400	420-8522-85/8
MXZ 440/500/600/700	01-03	568-2400	420-8522-85/8
MXZ 800 / MXZ 800 Rev	01/02	568-2400	420-8522-85/8
Skandic 500	2002	568-2400	420-8522-85/8
Skandic 550F SUV	2004	568-2400	420-8522-85/8
Skandic 600	02-03	568-2400	420-8522-85/8
Skandic 600 SUV	02-03/06	568-2400	420-8522-85/8
Spirit 250	73-80	568-3630	420-8521-35
Summit 600/700/800	2001	568-2400	420-8522-85/8
Summit 600HO / 700 / 800HO	2003	568-2400	420-8522-85/8
Summit X 800HO	2003	568-2400	420-8522-85/8

John Deere

All Models		568-3590	AM34566
------------	--	----------	---------

Kohler

All w/engine serial # AM, AMS, AS, AX, FA, RLC, FS, 2LC	69-94	568-3590	38.512.01
---	-------	----------	-----------

Lynx

All New style starter assy	00 - up	568-2400	
----------------------------	---------	----------	--

Mercury

All Models		568-3590	67198
------------	--	----------	-------

Polaris

Fits Most	81-00	568-1270	
-----------	-------	----------	--

Rupp

All Models		568-3590	25104
------------	--	----------	-------

Scorpion

Models w/JLO Cuyuna Engine	78-79	568-3590	
----------------------------	-------	----------	--

568-1270 \$19.95-J
Kimpex 11-127568-3630 \$25.95-J
Kimpex 11-363568-2400 \$28.95-J
Kimpex 11-365
17mm ID x 172mm OD568-3640 \$25.95-J
Kimpex 11-364568-3590 \$24.95-H
Kimpex 11-359568-3670 \$25.95-J
Kimpex 11-367

ROPE KEY CLAMP

REWIND STARTER PARTS



STARTER SCREWS
568-1501 \$.45-L
 Bombardier 420.9403.11
 To retain starter cable stop


Picture not available

ROPE STOP
568-1502 \$4.75-L
 Bombardier 420.9112.58
 All Models 69-80



ROPE KEY CLAMP
568-1503 \$1.95-J
 Bombardier 420.8520.70
 Moto-Ski 76-85 All Models
 Ski-Doo 1963-01 All Models

REWIND SPRINGS & MISC REWIND PARTS

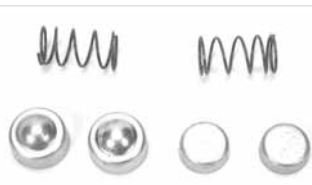

568-3142 \$2.95-L
 JLO Starter Spring Cup
 Kimpex 11-314-02



568-1520 \$5.95-L
 Rotax washer kit
 Kimpex 11-152



568-2021 \$2.95-L
 Hirth washer kit 15A17, 15A19
 Kimpex 11-202-01



568-3141 \$2.95-L
 JLO Starter Spring Cup
 Kimpex 11-314-01

STARTER PULLEYS



568-3570 \$18.50-J
 33.093.01 Kohler
 Kimpex 11-357



568-3580 \$13.95-J
 38-109.04 Kohler
 Kimpex 11-358

Model	Yr	TCI #
Kohler		
K250 1AMS/RLC	69-94	568-3580
K295 1	69-90	568-3570
K295 2AX/2RS	69-94	568-3580
K335 1	69-90	568-3570
K340 2AS/2AX/2FA/2RS/RLC	69-94	568-3580
K399 2	69-90	568-3570
K400 2RS	69-94	568-3580
K440 2	69-90	568-3570
K440 2AM/2AS/2AX/2LC/2RS/3RS/RLC	69-94	568-3580
RK399/440 2	69-90	568-3570

Moto-Ski

Capri 296	73-74	568-1461
Futura 295	74	568-1461
Futura	75-79	568-1460
(All Rotax twin cyl. F/C, L/C)		
Futura 444 L/C.	78-79	568-1463
Futura 500/E	80	568-1460
Futura L/C	80	568-1463
Grand Prix Special	79-80	568-1460
MS-F 296	73	568-1461
MS-S 400/440	73	568-1462
Mirage 300	79	568-1461
Nuvik (300/340/440 F/C)	75-79	568-1460
Sonic (250/340/340TS)	75-78	568-1462
Spirit 250 F/C	76-80	568-1400
Super Sonic 354 L/C	79-80	568-1464
TS	74-75	568-1462



568-1461 \$17.95-J
 420.5020.00 Bombardier
 Kimpex 11-146-01



568-1462 \$25.95-J
 540.85200.80 Bombardier
 Kimpex 11-146-02

STARTER PULLEYS



568-1400 \$35.95-J
402.5003.00 Bombardier
Kimpex 11-140



568-1460 \$25.95-H
420.9804.15 Bombardier
Kimpex 11-146

Model	Yr	TCI #
Ski Doo (Bombardier)		
All Models (Rotax single cyl.)	63-64	568-1400
Alpine (250/300)	65-68	568-1400
Alpine (370/399/440/640)	69-73	568-1460
Alpine (440/640)	74	568-1460
Alpine 640	75-80	568-1460
Blizzard (All Rotax F/A)	70-71	568-1460
Blizzard	72	568-1462
Blizzard 6500/7500/9500 L/C	78-80	568-1464
(293/339/395/438/645/797)		
Blizzard (6500/7500/9500 L/C)	78-80	568-1464
Blizzard 5500	79-80	568-1460
Citation 300	78-79	568-1461
Elan (247/292 F/C)	71-80	568-1400
Elan (250/300/SS twin cylinder)	73-79	568-1461
Elite 434 F/C	73-74	568-1460
Everest 343/440 F/C	74-79	568-1460
Everest 444 L/C	78-80	568-1463
Everest 503 F/C	80	568-1460
Nordic (All Rotax eng. F/C)	69-74	568-1460
Olympique	65-76	568-1400
(All Rotax single cyl., F/C)		
Olympique	69-79	568-1460
(All Rotax twin cyl., F/C)		
RV 340	77-78	568-1462
Skandic 335 F/C	70-73	568-1400
T'NT (All Rotax single cyl., F/C)	71-72	568-1400
T'NT (All Rotax twin cyl., F/C)	71-78	568-1460
T'NT (340/400/440 F/)	72-75	568-1462
T'NT (294/300)	73-74	568-1461
T'NT (340/440 F/A)	77-78	568-1463
T'NT RV (250/340 F/A)	76-79	568-1462
Valmont (399/440/640 F/C)	71-73	568-1460



568-1463 \$16.95-J
420.8521.60 Bombardier
Kimpex 11-146-03



568-1464 \$14.95-J
420.8522.40 Bombardier
Kimpex 11-146-04

STARTER HOUSING

Rotrax Starter Housing

568-1420

\$48.50-H

- OEM 420.9100.67
- Twin Cylinders

Model	Year
Moto-Ski	
Futura 500 F/C	81-82
Mirage II	82-83
Sonic	82
Ultra Sonic	82
Ski-Doo	
Blizzard MX	82-84
Citation 4500, LS, LSE	80-91
Escapade	87-89
Everest 500	80-83

Model	Year
Ski-Doo (con't)	
Safari 377/447	84/86/88
Safari 503 Cheyenne	88-91
Safari	89-92
Saga	89-92
Scout	89-92
Skandic II	92
Stratos	87-89
Tundra, LT	85-92
Voyageur	87-89

