

## EKHOLM SKI REPLACEMENT BASES

### Ekholm II Ski Replacement Base

- No holes drilled to fit any ski
- Sold in pairs

PART#	COLOR	RETAIL
902-9999*	Black 5" Standard	\$140.00-H
902-9999W	Black 7" Wide	\$190.00-H



### Ekholm Ski Plug Kit (Original Style) \$21.00-H

- Plastic plugs to fill holes in skis.

Ski Doo / Yamaha 903-920

## SKI SKINS

STRONG. DURABLE.

- U.H.M.W. plastic for years of durable use.
  - 1/4" & 1/8" skins
  - Sold by Set

### Arctic Cat

#### All—Deep Dish

- Have a deeper control ridge down the middle of the ski.
- Are used on most of the performance models with both AFS and AWS suspensions.

COLOR	PART#	RETAIL
Pink	902-1003	\$69.99-H

Fits: OEM 0706-119 & 0103-290

'92-97 Cougar, '79-91 Jag, '80-89 Panther, '94-97 Puma, '76-84 El Tigre, '93-96 Jag AWS, '92-97 Panther, '87-92 Super Jag, '91-96 EXT, '79-85 Pantera, '90-94 Prowler, '92 Wilcat (non EFI)

#### All - Shallow Dish

- Have a very shallow control ridge down the middle of the ski and the rear edge is slightly turned up.
- Used on some recreational models

COLOR	PART #	RETAIL
Magenta	902-1104	\$69.99-H
Orange	902-1122	\$69.99-H



Fits: OEM 0703-129

'93-94 Wildcat, '95-97 Bearcar 340/440, '86-94 Cheetah, '85-91 Cougar, '85-91 El Tigre, 89-92 Jag AFS, '91-93 Lynx, '90-91 Panther, 1992 Prowler 2-up, '93-96 Thundercat, '88-90 Wildcat 650, 1991 Wildcat 700, 91/95-97 Wildcat EFI, '95-97 Z 440, '95-96 ZR 580, 1995 ZR 700

### Ski Doo / Moto Ski

#### Wide Ski 5 1/2"

- No holes

COLOR	PART#	RETAIL
Pink	902-3003	\$69.99-H
Magenta	902-3004	\$69.99-H

Moto Ski - '80-85 Mirage, '79-82 Futura, '79-81 Grand Prix, '79-81 Super Sonic


Ski Doo - '79-84 Blizzard, '79-83 Everest, Formula and Mach 1- 139mm wide, '83-89 Safari, '83-87 Skandic. '85-89 Tundra

#### Yamaha


COLOR	PART #	RETAIL
Yellow	902-4011	\$69.99-H
Black	902-4099	\$79.99-H

'76-82 EX340 / 440 Exciter, '88-93 Exciter EX 570, '84-98 RZ480 Phazer


## ARCTIC CAT REPLACEMENT STEEL SKIS

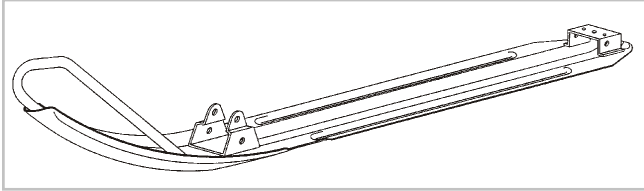


**905-1008**      **\$120.95-H**  
 OEM# 0103-095, 0103-290, 0703-043, Leaf Spring Frt Suspension  
 Kimpex 08-312      Wear Bar #907-1002

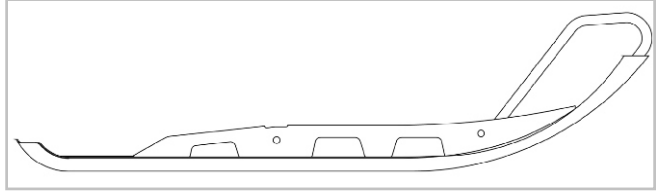

**905-1083**      **\$109.95-H**  
 OEM #0703-296  
 Wear Bar #907-1007  
**NOTE: Part #'s 905-1083 and 905-1084 are interchangeable**

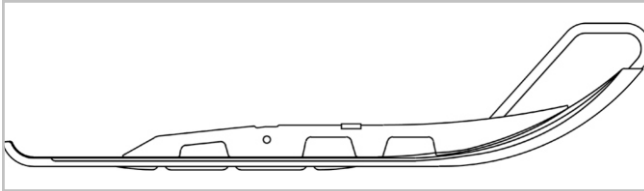

**905-1084**      **\$109.95-H**  
 OEM# 0703-086  
**For Plastic Skis replacement**  
 Wide spindle (3.7")

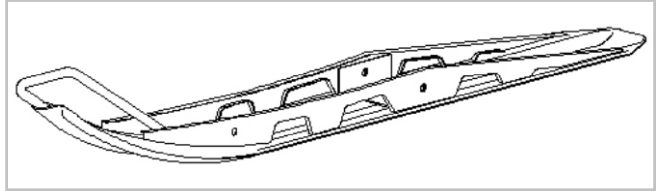

**905-1085**      **\$115.95-H**  
 OEM #0703-180, 0703-119, 0703-152  
 Kimpex 08-341      Wear Bar #907-1005, 907-1008

## ARCTIC CAT REPLACEMENT STEEL SKIS

Arctic Cat	Year	OEM #	Part #
Bearcat 340	1995	0703-129	905-1008
Bearcat 340	96-99	0703-296	905-1083
Bearcat 440	95-98	0703-296	905-1083
Bearcat 550, Wide Trak	95-99	0703-296 / 0703-492	905-1083
Cheetah/Cheetah Wandel	72-75	010-073	Use 905-1008*
Cheetah (all)	76-78	0703-068	Use 905-1008*
Cheetah (all)	86-94	0703-001 / 0703-028 / 0703-129 / 0703-295	905-1083
Cougar	1968	0103-073	Use 905-1008*
Cougar (all)	85-92	0703-001 / 0703-028 / 0703-129 / 0703-295	905-1083
Cougar (all)	93-94	0703-119	905-1085
Cougar (all)	95-98	0703-001 / 0703-028 / 0703-129 / 0703-295	905-1083
El Tigre	73-74	0103-073	Use 905-1008*
El Tigre/El Tigre Z	1975	0103-086 / 0103-095	905-1008
El Tigre (all)	76-81/84	0103-290	905-1008
El Tigre/El Tigre EXT (all except below)	85-91	0703-001 / 0703-028 / 0703-129	905-1083
El Tigre EXT Special	1991	0703-119	905-1085
EXT	72-73	0103-073	Use 905-1008*
EXT 550 / 580 / Mountain Cat	91-93	0703-119	905-1085
EXT 580 Z	1993	0703-180	905-1085
EXT 580 ZR	1993	0703-119	905-1085
EXT 580 / Mountain Cat	94-98	0703-295	905-1083
EXT 600 Triple	97-98	0703-295	905-1083
EXT Special	1991	0703-119	905-1085
EXT Special	1992	0703-180	905-1085
Jag	1975	0103-073	Use 905-1008*
Jag	76-79	0703-068	Use 905-1008*
Jag (Leaf Spring)	80-81/85-91	0103-290	905-1008
Jag	92-93	0703-119	905-1085
Jag	1997	0703-295	905-1083
Jag 340 / Jag 440 / Jag Deluxe (Leaf Spring)	1988	0103-290	905-1008
Jag 440 Z	92-93	0703-119	905-1085
Jag AFS	89-93	0703-028	905-1083
Jag AFS Deluxe	90-91	0703-295	905-1083
Jag AFS L/T	92-93	0703-129	905-1083

\* 905-1008 needs 931-3254 rubber ski bumper with this application



## SKIS

### ARCTIC CAT REPLACEMENT STEEL SKIS


Arctic Cat	Year	OEM #	Part #
Jag Deluxe/Liquid	94-99	0703-295	905-1083
Jag Deluxe	97-99	0703-129 / 0703-295	905-1084
Jag Special	1992	0703-180	905-1085
Jag Z	93-94	0703-180	905-1085
Lynx I / II	71-75	0103-073	Use 905-1008*
Lynx	77-80	0703-068	Use 905-1008*
Lynx 300/Lynx 300 Deluxe	1991	0703-028	Use 905-1008*
Lynx / Lynx Deluxe / Lynx Mountain Cat	92-93	0703-129	905-1083
Mountain Cat 580	1994	0703-129	905-1083
Pantera	1975	0103-073	Use 905-1008*
Pantera	79/81/85/89	0103-290 / 0703-043	905-1008
Pantera	86-88	0703-001 / 0803-028	905-1083
Pantera	1990	0703-041	905-1083
Pantera/Pantera EXT	91-94	0703-119	905-1085
Pantera	95-96	0703-129	905-1083
Panther	67-75	0103-073	Use 905-1008*
Panther	76-79	0703-068	Use 905-1008*
Panther	80-81/84-89	0103-290	905-1008
Panther / Panther Deluxe / Panther Liquid / Panther Mountain Cat	90-91/96	0703-028 / 0703-129 / 0703-295	905-1083
Panther / Panther Deluxe	92-95	0703-119	905-1085
Panther 440 / Panther 550	97-98	0703-129 / 0703-295	905-1083
Panther 340 / Panther 440 / Panther 550	1999	0703-086	905-1084
Prowler	1990	0703-052	905-1085
Prowler / Prowler 2-Up / Prowler Mountain Cat	91-93	0703-119	905-1085
Prowler Special	1991	0703-119	905-1085
Prowler Special	1992	0703-180	905-1085
Prowler 2-Up	1995	0703-129	905-1083
Puma	70-73	0103-073	Use 905-1008*
Puma / Puma Deluxe	94-96	0703-119	905-1085
Puma / Puma 2-Up / Puma Deluxe	1997	0703-129	905-1083
Super Jag	87-93	0103-290 / 0703-043	905-1008
Thunder Cat / Thunder Cat Mountain Cat	93-96	0703-129 / 0703-295	905-1083
VIP	1974	0103-073	Use 905-1008*
Wildcat (all)	88-91	0703-129	905-1083
Wildcat / Wildcat Mountain Cat	92-93	0703-180	905-1085
Wildcat EFI / Wildcat EFI Mountain Cat	1992	0703-129	905-1083
Wildcat EFI / Wildcat EFI Mountain Cat	1993	0703-180	905-1085
Wildcat EFI / Wildcat EFI Mountain Cat	1994	0703-119	905-1085
Wildcat (all)	95-96	0703-028 / 0703-295 / 0703-129	905-1083
Z	76-77	0103-095	905-1008
Z 440	94-96	0703-295	905-1083
ZL 440	97-98	0703-295	905-1083
ZR 440 / ZR 580 / ZR 600 EFI / ZR 700	94-96/98	0703-295	905-1083
ZRT 600 / 800	96-98	0703-295	905-1083

\* 905-1008 needs 931-3254 rubber ski bumper with this application


## BOMBARDIER (MOTO-SKI/SKI-DOO) REPLACEMENT STEEL SKIS




**905-0299 \$152.95-H**  
 OEM# 505.0221.00  
 Kimpex 08-299 Wear Bar #907-3003

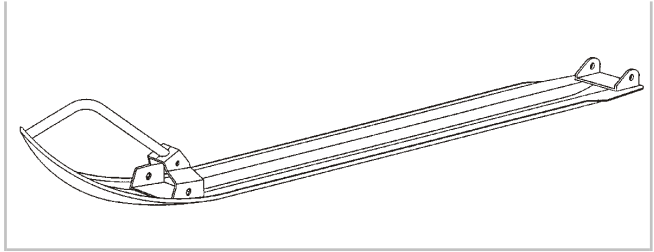


**905-1019 \$99.95-H**  
 OEM# 505.0281.00  
 Kimpex 08-298 Wear Bar #907-3005

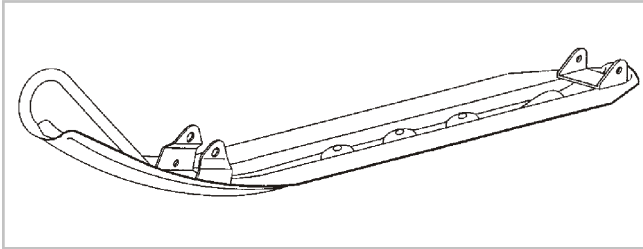


**905-1032 \$142.95-H**  
 OEM# 505.00615.00  
 Kimpex 08-329 Wear Bar #907-3000

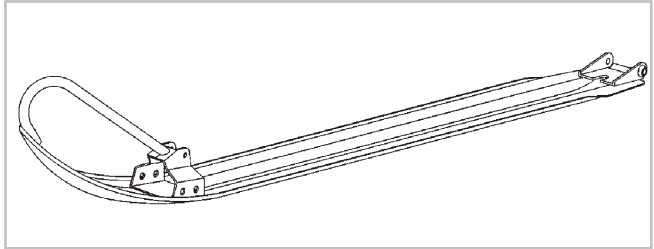


**905-1041 \$99.95-H**  
 OEM# 505-0613/0420-00  
 Kimpex 08-297 Wear Bar #907-3005

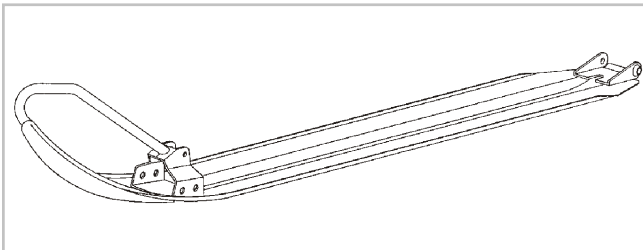


**905-1057 \$182.95-H**  
 OEM# 505-0552-00  
 Kimpex 08-323 Wear Bar #907-3009

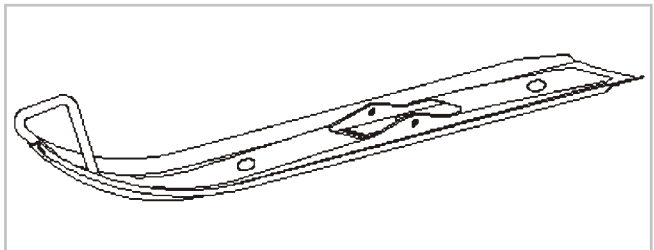


**905-1058 \$109.95-H**  
 Ski is 139mm (wide), Fits F & S chassis  
 OEM# 505-0630-00  
 Kimpex 08-322 Wear Bar #907-3011

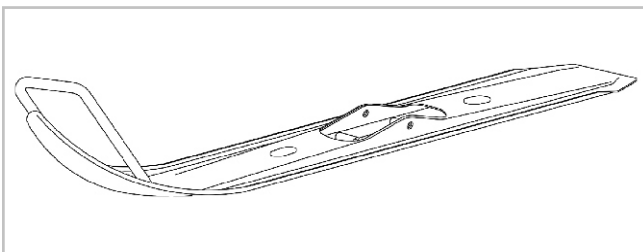


**905-1075 \$162.95-H**  
 OEM# 505-0603-00  
 Kimpex 08-343 Wear Bar #907-3011

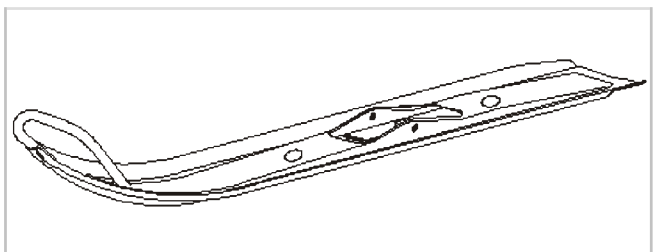

**905-1076 \$162.95-H**  
 Ski is 117mm (Narrow), Fits F & S chassis  
 OEM# 505-0628-00  
 Kimpex 08-342 Wear Bar #907-3011

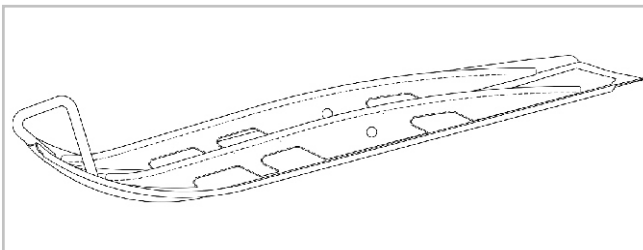

**905-1078 \$137.95-H**  
 OEM# 505-0639-10  
 Kimpex 08-344 Wear Bar #907-3015

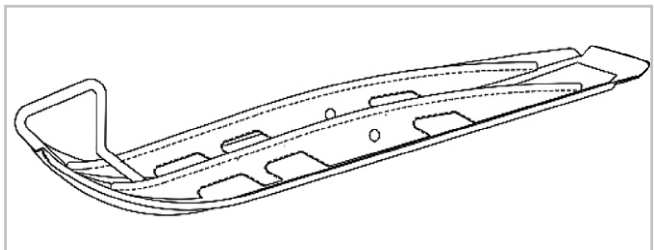

**905-1092 (Black Powder coated) \$104.95-H**  
 OEM# 505.070.370/505.070.325  
 Kimpex 08-348 Wear Bar #907-3015



## BOMBARDIER (SKI-DOO) REPLACEMENT STEEL SKIS

Bombardier	Year	OEM #	Part #
All Models A, J, K, R, AR, BR	62-64	505 0221 00	905-0299
Blizzard (all)	70-71	505 0221 00	905-0299
Blizzard 246	1971	505 0615 00	905-1032
Blizzard 6500	1978	505 0221 00	905-0299
Chalet	65-67	505 0221 00	905-0299
Citation 300	78-79	505 0615 00	905-1032
Citation 3500 / Citation 4500 / Citation SS	80-84	505 0281 00	905-1019
Citation LS / LSE / E	85-91	505 0420 00 / 505 0613 00	905-1041
Elan	89/92-95	505 0615 00	905-1032
Elan 250 (all)	71-96	505 0615 00	905-1032
Everest (all)	74-78	505 0221 00	905-0299
Formula III 600	95-96	505 0628 00 (narrow 117mm)	905-1076
Formula 500 Deluxe L/C / Formula 500 L/C	2000	505 0703 25	905-1092
Formula 500 / 583	95-99	505 0678 10	905-1078
Formula Deluxe 380 / Formula Deluxe 500 Fan	2001	505 0703 25	905-1092
Formula Grand Touring	1993	505 0630 00 (wide 139mm)	905-1058
Formula Mach I / zI / XTC (Narrow - 117 mm)	89-96	505 0628 00 (narrow 117mm)	905-1076
Formula Mach I / II / XTC (Wide - 139 mm)	89-96	505 0630 00 (wide 139mm)	905-1058
Formula MX / Formula Plus	85-86	505 0628 00 (narrow 117mm)	905-1076
Formula MX / LT / XTC / II (Narrow - 117 mm)	87-93	505 0628 00 (narrow 117mm)	905-1076
Formula MX / LT / XTC (Wide - 139 mm)	87-95	505 0630 00 (wide 139mm)	905-1058
Formula MX Z	93-95	505 0628 00 (narrow 117mm)	905-1076
Formula Plus / LT / XTC (Narrow - 117 mm)	87-93	505 0628 00 (narrow 117mm)	905-1076
Formula Plus / LT / XTC (Wide - 139 mm)	87-93	505 0630 00 (wide 139mm)	905-1058
Formula S	95-99	505 0678 10	905-1078
Formula S Electric Start	95-99	505 0678 10 / 505 0701 99	905-1078
Formula SL / Formula SLS	95-99	505 0678 10 / 505 0701 99	905-1078
Formula SS / Formula SP	85-86	505 0552 00	905-1057
Formula Z	94-96	860 6002 00/505 0628 00(narrow 117mm)	905-1076
Futura (All)	76-78	505 0221 00	905-0299
Grand Touring / Grand Touring SE / Grand Touring XTC	93-94	505 0630 00 (wide 139mm)	905-1058
Grand Touring 380 / Grand Touring 500 Fan	2002	505 0703 70	905-1092
Grand Touring 500 / Grand Touring E	1996	505 0639 10 / 505 0678 10	905-1078
Grand Touring LE / Grand Touring SLE	1996	505 0639 10 / 505 0678 10	905-1078
Grand Touring 580 / Grand Touring 670	95-96	860 6002 00/505 0628 00(narrow 117mm)	905-1076
Legend 380 Fan / Legend 500 Fan	2002	505 0703 25	905-1092
Mach 1 670 / Mach 1 700	97-98	505 0628 00 (narrow 117mm)	905-1076
Mach 1 , Mach 1 XTC (Narrow - 117 mm)	89-96	505 0628 00 (narrow 117mm)	905-1076
Mach 1 , Mach 1 XTC (Wide - 139 mm)	89-96	505 0630 00 (wide 139mm)	905-1058
Mach Z 780	93-96	505 0628 00 (narrow 117mm)	905-1076
Mirage 300	1979	505 0615 00	905-1032
Mirage I / Mirage II / Mirage SP	80-83	505 0281 00	905-1019
MX Z 380 Fan	01-02	505 0703 25	905-1092
MX Z 440 Fan	01-02	505 0703 25	905-1092
MX Z 500 Fan	01-02	505 0703 25	905-1092
Nordik (all)	69-74	505 0221 00	905-0299
Nordik 377	81-83	505 0221 00	905-0299
Nuvik (all)	75-79	505 0221 00	905-0299
Olympique (all)	65-79	505 0221 00	905-0299
Safari Citation / Safari Citation E	89-90	505 0613 00	905-1041
Safari 377 / Safari 447 / Safari Grand Luxe / Safari SS-25	84-87	505 0552 00	905-1057
Safari 503	1988	505 0552 00	905-1057
Safari Scout / Safari Scout E / Safari Saga	1989	505 0552 00	905-1057
Safari GLX	90-92	505 0603 00	905-1075
Safari L / Safari LE / Safari LC / Safari LCE / Safari LX / Safari LXE	90-92	505 0603 00	905-1075
Safari L / Sdafari Rally / Safari Deluxe	93-94	505 0603 00	905-1075




## BOMBARDIER (SKI-DOO) REPLACEMENT STEEL SKIS

Bombardier	Year	OEM #	Part #
Skandic 300	1996	505 0639 10	905-1078
Skandic 335	71-73	505 0221 00	905-0299
Skandic 380 / Skandic 500	95-96/98-99	505 0678 10/505 0701 99	905-1078
Skandic 380 Fan / Skandic 500 Fan	2000	505 0703 25	905-1092
Skandic 503	1987	505 0552 00	905-1057
Skandic II / Skandic 377/ Skandic 503 / Skandic 503 R	92-94	505 0603 00	905-1075
Sonic 250 / Sonic 340	76-78	505 0221 00	905-0299
Spirit	76-83	505 0615 00	905-1032
Summit 470 / Summit 583 / Summit 670 (Steel)	94-95	505 0630 00 (wide 139mm)	905-1058
Summit 500 / Summit 583 (Steel)	1996	505 0630 00 (wide 139mm)	905-1058
Summit 670 (Steel)	96-97	505 0630 00 (wide 139mm)	905-1058
TNT (All)	69-73	505 0221 00	905-0299
TNT 340 / TNT 440 F/A, F/C	75/77-78	505 0221 00	905-0299
TNT F/A, F/C, RV	74-76	505 0221 00	905-0299
Touring 380 / Touring 500 Fan	2001	505 0703 70	905-1092
Touring E / Touring LE / Touring SLE	95-98	505 0678 10	905-1078
Touring E / Touring LE / Touring SLE	2000	505 0703 70	905-1092
Tundra	1985	505 0420 00	905-1041
Tundra LT / Tundra LTS	85-89	505 0552 00	905-1057




## SKIS

### POLARIS REPLACEMENT STEEL SKIS

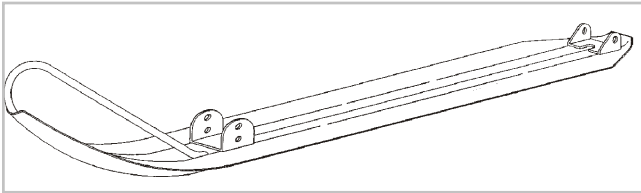


**905-1007      \$99.95-H**

OEM# 1820255  
Kimpex 08-308      Wear Bar #907-2002 ( 1 bolt runner )  
Fit all Leaf Spring up tp 1990

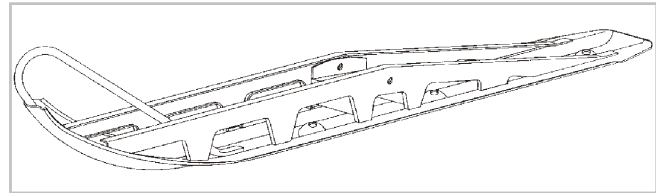

**905-1039      \$142.95-H**

OEM# 1820332-067  
Kimpex 08-333      Wear Bar #907-2005  
Fit Most Indy from 1980 up to 1996

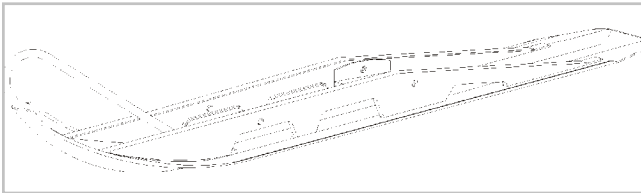

**905-1081      \$163.95-H**

OEM# 1820430-067      Kimpex# 08-350  
Kimpex 08-350      Wear Bar #907-2005  
Fit Most Indy from 1997 to present

To replace plastic skis with metal for '97 and up  
Use 905-1081

Polaris	Year	OEM #	Part #
Polaris (all) - except below	69-82	1820255-067	905-1007
Centurion Indy 500 / TX-L Indy / TX-L 340	80-82	1820265	905-1037
Indy 340 / Indy 340 Deluxe	99-04	1820333-067	Use 905-1081*
Indy 340 Edge	03-04	1820430-067	905-1081
Indy 340 Edge Classic	03-05	1820430-067	905-1081
Indy 340 Touring	01-05	1820333-067	Use 905-1081*
Indy 400 / Indy 400 SKS	84-86	1820265	905-1037
Indy 400 / Indy 400 SKS	87-90 / 95	1820332-067	905-1039
Indy 400 XCR	1993	1820332-067	905-1039
Indy 440 / Indy 440 SKS, Indy 440 XCR	94-96	1820332-067	905-1039
Indy 440	97-98	1820430-067	905-1081
Indy 488	1985	1820265	905-1039
Indy 500	98-02	1820430-067	905-1081
Indy 500 / Indy 500 Classic / Indy 500 SKS / Indy 500 SP	89/91-92/95	1820265 / 1820332-067	905-1039
Indy 500 EFI / Indy 500 EFI SKS	93-96	1820332-067	905-1039
Indy 500 EFI / Indy 500 SKS	1997	1820430-067	905-1081
Indy 600 XC	1997	1820430-067	905-1081
Indy 600 / Indy 600 SE / Indy 600 LE	83-87	1820265	905-1037
Indy 600 XCR / Indy 600 XCR-SP	95-96	1820332-067	905-1039
Indy 650 / Indy 650 SKS	88-90	1820265	905-1039
Indy Classic / Indy Classic Touring	88/91/94-96	1820265 / 1820332-067	905-1039
Indy Cross Country	1983	1820265	905-1039
Indy Lite / Indy Lite GT / Indy Lite Deluxe	92-96	1820333-067	Use 905-1081*
Indy Lite	1997	1820430-067	905-1081
Indy RXL / Indy RXL SKS / Indy RXL Touring	91-97	1820332-067	905-1039
Indy Sport	1983	1820255-067	905-1007
Indy Sport / Indy Sport GT / Indy Sport LX / Indy Sport SKS	87-96	1820265 / 1820332-067	905-1039
Indy Sport Touring	95-96	1820332-067	905-1039
Indy Sport / Indy Sport Touring	97-04	1820430-067	905-1081
Indy Starlite	1995	1820333-067	Use 905-1081*
Indy Storm (all)	93-97	1820332-067	905-1039
Indy Super Sport	94-01	1820332-067	905-1039

Use 905-1081\* needs 931-3254 rubber ski bumper with this application



## POLARIS REPLACEMENT STEEL SKIS


Polaris	Year	OEM #	Part #
Indy Super Sport	02-04	1820430-067	905-1081
Indy Trail	83-87	1820265	905-1037
Indy Trail	88-89/94-96	1820265 / 1820332-067	905-1039
Indy Trail	97-99	1820430-067	905-1081
Indy Trail Deluxe	88-95	1820265 / 1820332-067	905-1039
Indy Trail ES / Indy Trail SKS	87-89	1820265	905-1037
Indy Trail SP	88-89	1820265 / 1820332-067	905-1039
Indy Trail Touring	1996	1820332-067	905-1039
Indy Trail Touring	97-00/02-04	1820430-067	905-1081
Indy Transport	1996	1820332-067	905-1039
Indy Transport	97-99	1820430-067	905-1081
Indy Ultra SKS / Indy Ultra SP	1996	1820332-067	905-1039
Indy Ultra / Indy Ultra SP / Indy Ultra SPX / Indy Ultra Touring	97-98	1820430-067	905-1081
Indy XCF	1997	1820430-067	905-1081
Indy XLT (all)	93-98	1820430-067	905-1081
Long Trak	83-87	1820255-067	905-1007
Spirit ES	1987	1820255-067	905-1007
Sprint / Sprint ES	86-89	1820255-067	905-1007
Star / Star SS	83-89	1820255-067	905-1007
Star Lite / Star Lite GT	92-94	1820333-067	Use 905-1081*
Star Trak	87-90	1820255-067	905-1007
Star Twin / Star Twin ES	1985	1820255-067	905-1007
Wide Trak / Wide Trak GT / Wide Trak LX	93-96	1820332-067	905-1039
Wide Trak LX	97-02	1820430-067	905-1081

Use 905-1081\* needs 931-3254 rubber ski bumper with this application




**SKIS**


**YAMAHA REPLACEMENT STEEL SKIS**

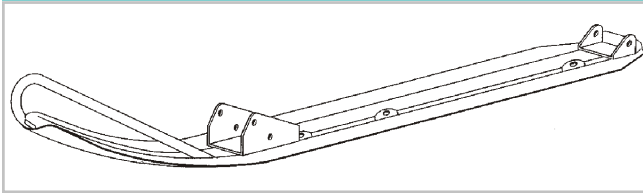


**905-1028 \$109.95-H**  
 OEM# 8E3/85T-23710-09-00  
 Kimpex 08-313 Wear Bar #907-4005

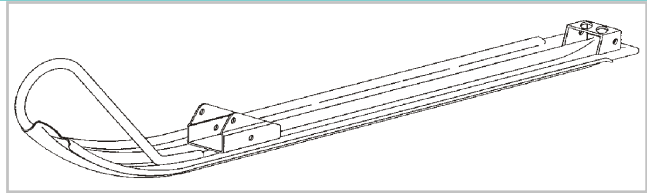


**905-1029 \$109.95-H**  
 OEM# 8F3-23710-01/00  
 Kimpec 08-310 Wear Bar #907-4003

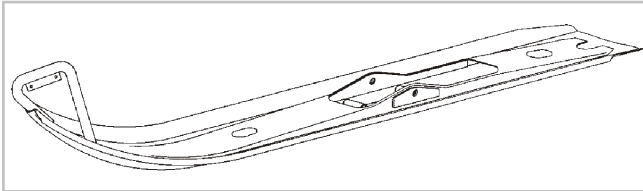


**905-1062 \$114.95-H**  
 OEM# 88F-23710-01  
 Kimpex 08-325 Wear Bar #907-4009

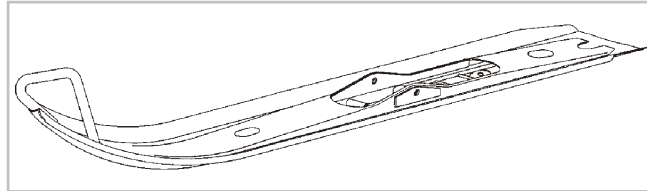

**905-1065 \$142.95-H**  
 OEM# 81L-23710-00  
 Kimpex 08-331 Wear Bar #907-4008

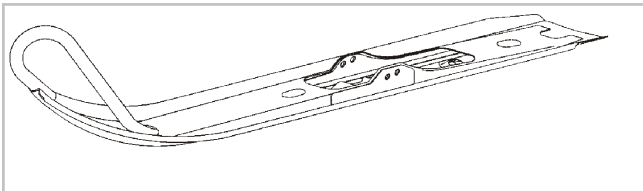

**905-1067 \$89.95-H (Limited stock left)**  
 OEM# 86M-23710-01-00  
 TCI Wear Bar #907-4009

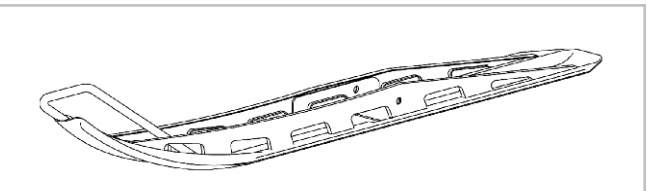

**905-1070 \$164.95**



**905-334 \$139.95-H**  
 OEM# 86C/8E5/85T -23710-00  
 Wear Bar #907-4005  
 Can sub to 905-1028 with old style handle/hoop

Yamaha	Year	OEM #	Part #
Bravo BR 250	82-93	8F-23710-01-00	905-1028
Bravo BR 250T (all)	94-01	8E3-23710-09-00	905-1029
Bravo BR 250 T	02-05	86C-23710-00	905-1029
Bravo BR 250 TS	1984	8E3-23710-00	905-1028
Enticer ET 250 / Enticer ET 300 (all)	77-84	8F3-23710-01-00	905-1028
Enticer ET 340 (B, C, D, F, H) (all except below)	78-84	8F3-23710-01-00	905-1028
Enticer ET 340 T (F, G, H, J, K, L)	82-87	8E3-23710-09-00	905-1028
Enticer / ET 340 TM / Enticer ET 340 TRM / Enticer ET 440 TRP	1988	8E3-23710-09-00	905-1028
Enticer 400 TRN Transporter	1989	85T-23710-09-00	905-1028
Excel III EC 340 (E, G, H)	81/83-84	8F3-23710-01-00	905-1028
Excel V EC 540 (C, D)	79-80	8E3-23710-09-00	905-1028
Excel V XL 540 (J, K, L, M, N, P)	85-90	8Y7-23710-00-00	908-1072
Exciter EX 340 (A, B) / Exciter EX 440 (A, B, C, D, E)	76-81	8E3-23710-09-00	905-1028
Exciter EX 570 E (R, S, T) / Exciter EX 570 (R, S, T)	91-93	88F-23710-01-00	905-1062
GP 300 / GP 440 (A) / GS 340 / PR 440	76-77	8E3-23710-09-00	905-1028
GS 300 A / GS 340 A	1977	8E3-23710-09-00	905-1028
Inviter (CF300)	86-90	8E-23710-00-00	905-1065



## SKIS

### YAMAHA REPLACEMENT STEEL SKIS

Yamaha	Year	OEM #	Part #
Ovation CS 340	89-00	85L-23710-01-00	905-1062**
Phazer 480 PZ 480 (all)	84-99	88F-23710-01-00	905-1062**
Phazer 500	99-00	8DJ-23710-00-00	905-1070
SR 540 (E,F)	81-82	8L0-23710-00-00	905-1064
SRV SR 540 (G, H, J, K)	83-86	8L0-23710-00-00 / 8X6-23710-00-00	905-1064
SRV SR 540 (L, M, N, P, R)	87-91	82M-23710-03-00	905-1064
SRX 440 E *	1981	8M6-23710-01-00	905-1064 *
STX	76-77	8E3-23710-09-00	905-1028
Venture 500 / Venture 500 XL / Venture 600 / Venture 700	2000	8DJ-23710-00-00	905-1070
V-MAX VMX 540 (G, H, J, K) *	83-86	8M6-23710-01-00 / 8X6-23710-00-00	905-1064 *
V-MAX VMX 540	87-91	82M-23710-03-00	905-1064
V-MAX 500 (all) / 600 (all) / 700 (all)	97-99	8CR-23710-00-00	905-1070
V-MAX 500 (all) / 600 (all) / 700 (all)	2000	8DJ-23710-00-00	905-1070

\* Must use Part #931-0230 Bolt and spacer kit for these models

\*\* As replacement - Ski Bumper Part #931-3255 must be used

**PPD PLASTIC SKIS**

**PPD X-TR PLASTIC SKIS**

Unique design features a three keel system. The front of the ski is a tunnel design for straight line stability, but unlike a tunnel ski it has a "trailing" carbide behind the pivot point for increased bite on corner. All round great ski for Trail riding. Turns aggressively for excellent cornering. Great floatation for Mountain riding. Has a new and improved handle for easy gripping!

- Weight - Complete with carbide 5.15 lbs.
- Length 40"
- Width 5.5"

Must order both skis and mounting kit.



**End**

**DESCRIPTION**

Skis only

Mount Kits

Arctic Catt

Polaris

Ski Doo RAS/REV

Yamaha '97 and newert

**TCI PART #**

905-2000

905-2010

905-2020

905-2031

905-2040

**RETAIL**

\$450.00-H

\$ 89.95-H


\$ 89.95-H

\$ 89.95-H

\$ 89.95-H



**Side**

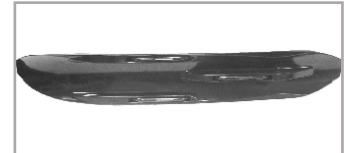

**Bottom**